


Quick Guide


Starting & Stopping

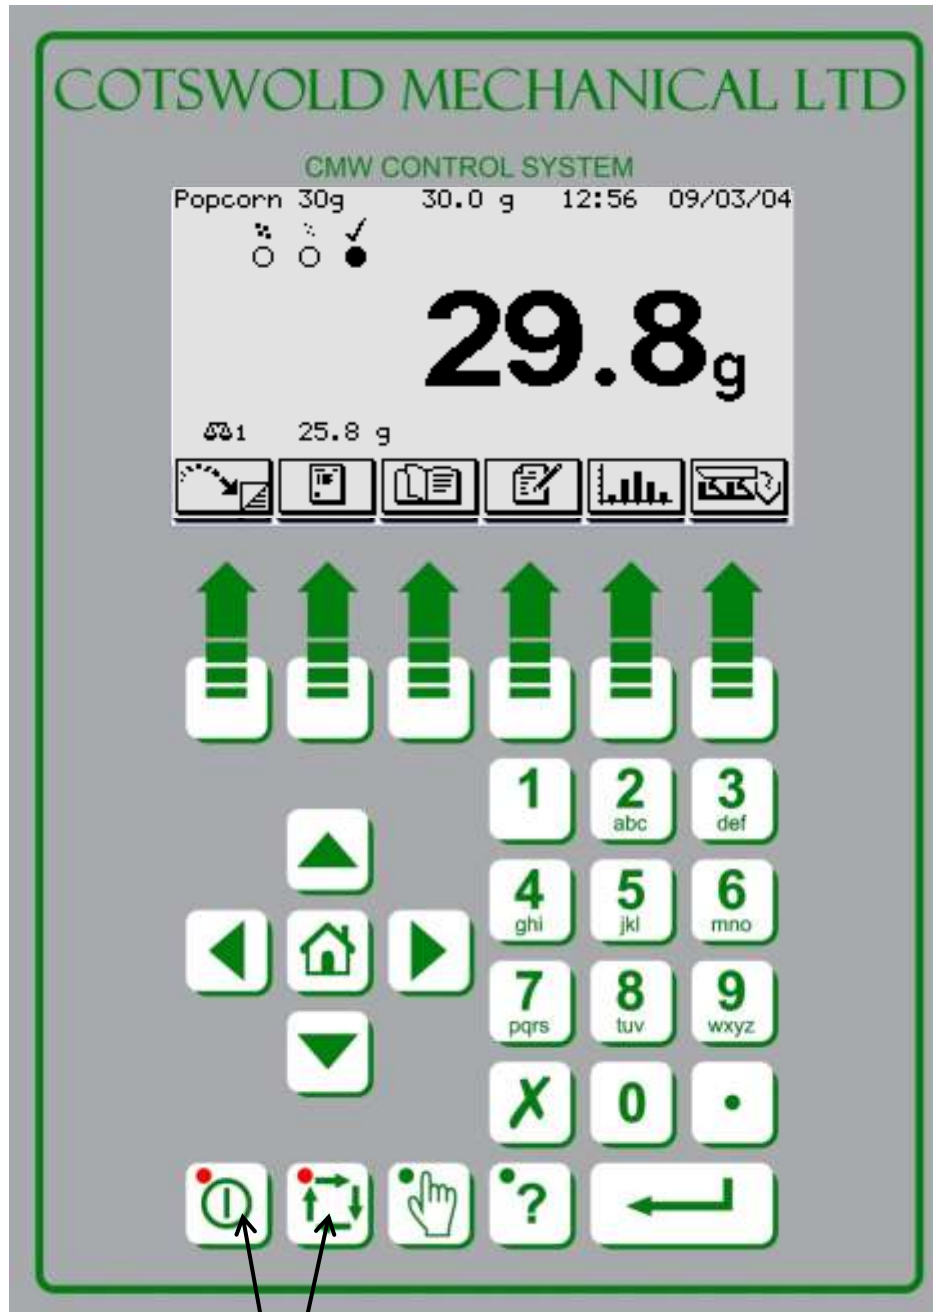

To Run The System
both switches on

COTSWOLD MECHANICAL LTD

To Select a Product

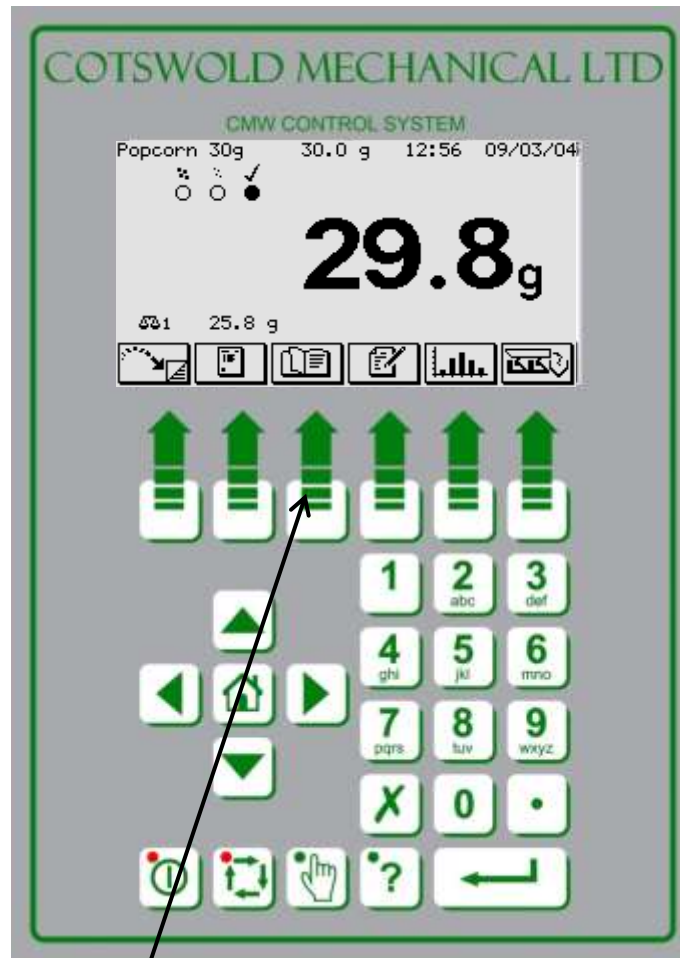

Press this button (Product Library)




Use UP / DOWN ARROWS to select current product to run or edit. Confirm selection with OK button.




COTSWOLD MECHANICAL LTD

To Empty the System

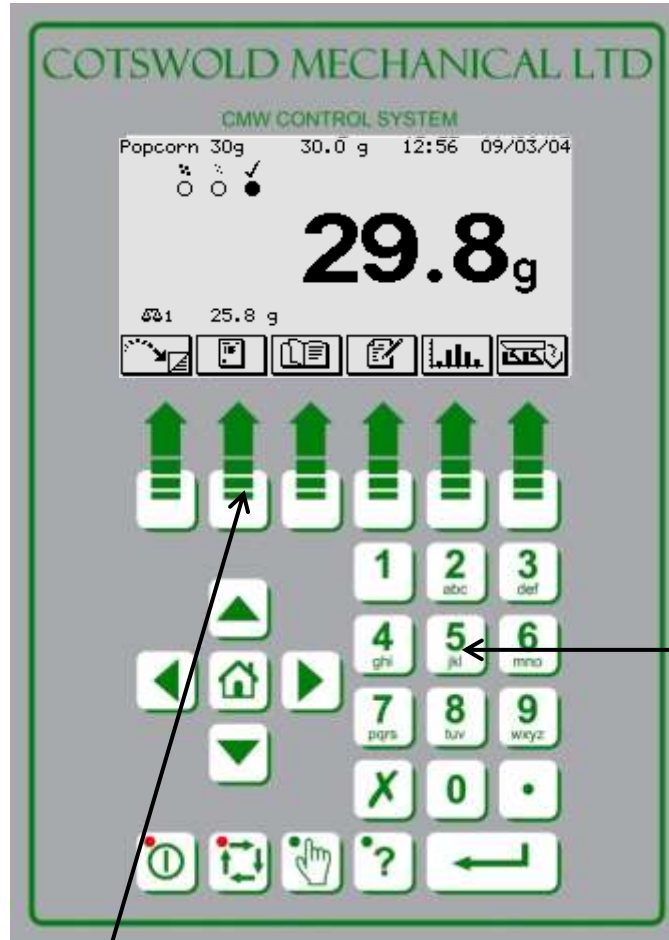


Press this button (Main Menu)

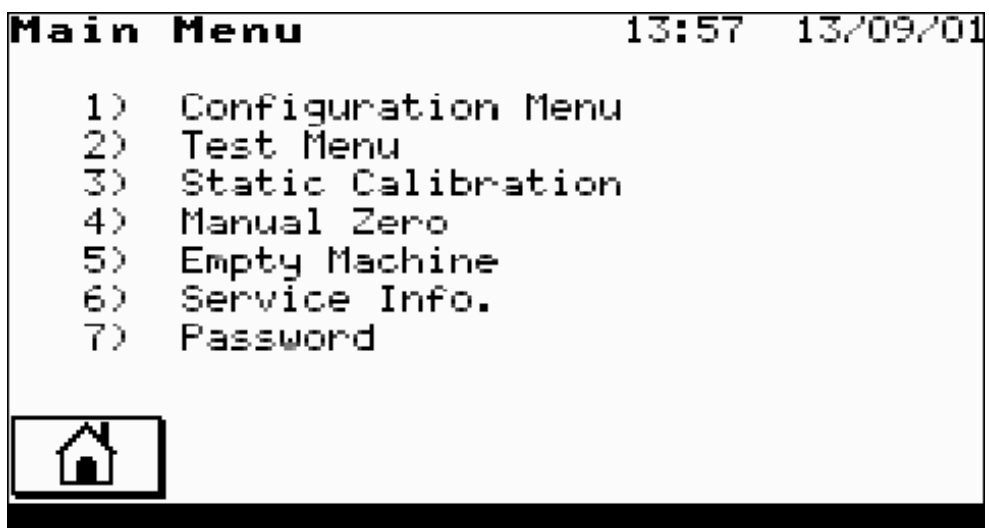

Press Key "5"

COTSWOLD MECHANICAL LTD

To Empty the System continued

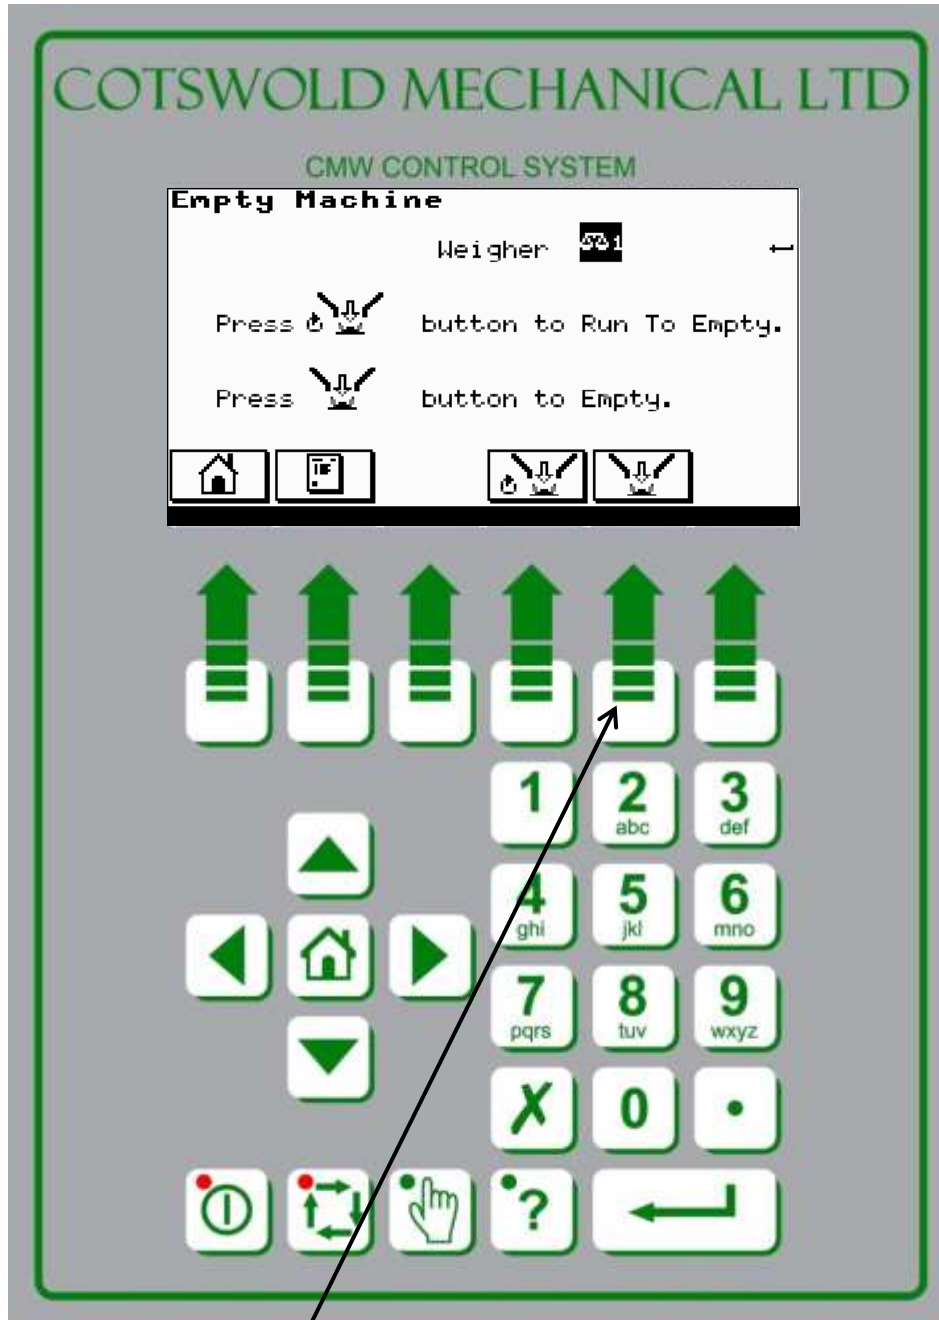

Press this button (Empty)




Press "Home Key" to exit and stop empty



COTSWOLD MECHANICAL LTD

To Change Target Weight

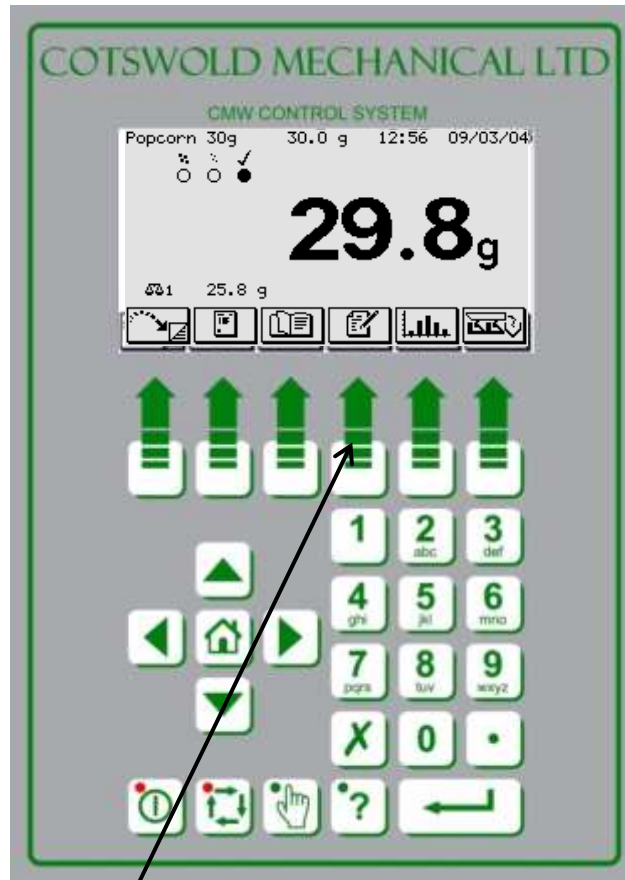

Press this button  Edit Product
(Note ** Password Required)




Select Target  Type in Required value
Press Enter Key to Save



COTSWOLD MECHANICAL LTD


To Change Bulk / Fine Weights & Vibrator Speeds

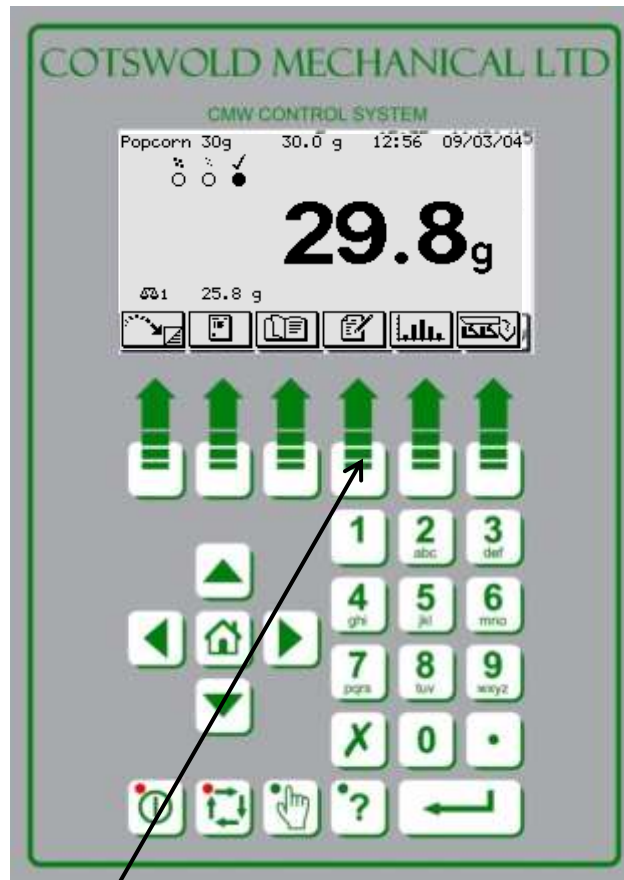

Press this button **Edit Product**
(Note ** Password Required)



Press right arrow key  until Display matches below

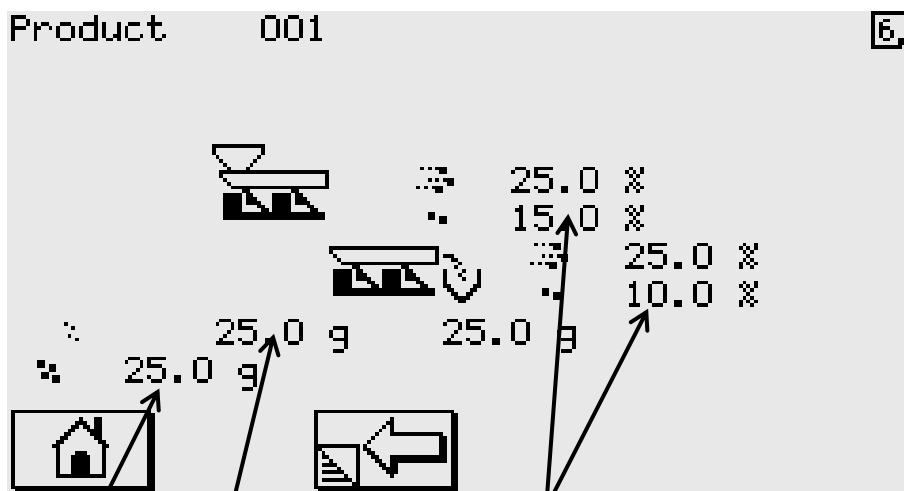

Select Bulk / Fine or Vibrator Speeds- Type in Required values
Press Enter Key to Save

